MINOSTON®


Door & Window Alarm


• MSE31N •



Product Overview

Door & Window Alarm

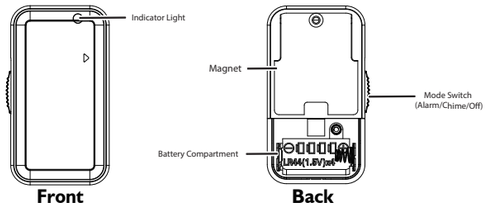

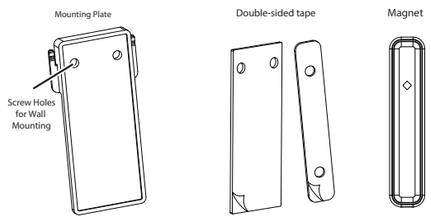

Battery

Four LR44 batteries are pre-installed.

Before First Use

1. Loosen the screw and slide the battery cover down.
2. Remove the battery insulation tab. Do not remove the batteries.
3. Slide the cover back into place and tighten the screw.

Battery Replacement

1. Loosen the screw and slide the battery cover down.
2. Replace all four LR44 batteries, matching the (+) and (−) polarity markings.
3. Slide the cover back into place and tighten the screw.

Low Battery

The red LED flashes when the batteries are low.
Important: Replace all four batteries at the same time. Do not mix old and new batteries or different battery types.

Installation

IMPORTANT: Install the Magnet to the **right of the Alarm Unit.** When the door or window is closed, the alignment arrows on both units must line up. Improper placement or alignment may prevent the alarm from operating correctly.

1. Select the Installation Location

Install the Alarm Unit and Magnet on a flat, smooth, clean, and dry surface. Do not install on wet, dusty, oily, rough, or uneven surfaces.

2. Install the Alarm Unit and Magnet

- Separate the pre-cut 3M™ double-sided adhesive tape into two pieces.
- Apply one piece to the back of the Alarm Unit and the other to the Magnet.
- Mount the Alarm Unit on the stationary part of the door or window.
- Mount the Magnet on the moving part, to the **right of the Alarm Unit.**
- With the door or window closed, make sure the alignment arrows line up.
- Keep the gap between the Alarm Unit and Magnet **less than 1/2 in. (13 mm).**
- Remove the remaining protective film and press both units firmly into place.

3. Test the Installation

CAUTION: The alarm may produce sound levels up to **120 dB**. Keep a safe distance during testing. Use hearing protection if needed and keep the test brief.
Close the door or window. Confirm that the alignment arrows are lined up and the gap is less than **1/2 in. (13 mm)**. Open the door or window to activate the alarm. Confirm that the alarm sounds properly.

Operating Modes

Off: Turns the alarm off.
Chime: Sounds a brief chime when the door or window is opened.
Alarm: Sounds an alarm up to 120 dB when the door or window is opened. The alarm continues until the door or window is closed.

Troubleshooting

Alarm Does Not Sound

- Check that the battery insulation tab has been removed.
- Make sure the batteries are installed correctly.
- Replace the 4 new batteries if necessary.
- Make sure the mode switch is set to CHIME or ALARM.
- Make sure the Magnet is on the right side of the Alarm Unit, the arrows are lined up, and the gap is less than 1/2 in. (13 mm).

Need Help?

For questions or support, visit www.minoston.com or email: ask @minoston.com.

Warnings

WARNING — Limitations of This Alarm Product

This product is intended to provide an additional level of security only. It **is not a substitute for proper security practices** and does not guarantee protection against burglary, theft, unauthorized entry, or other security-related events.

Test the product regularly to verify proper operation. Failure to install, maintain, or test the product as instructed may reduce its effectiveness.

Alarm sound may be reduced, blocked, or masked by walls, doors, floors, furniture, distance, ambient noise, or other environmental conditions. The alarm may not be heard by all occupants, including individuals who are sleeping or have hearing impairment.

For reliable operation:
- Follow all installation and operating instructions.
- Maintain adequate battery power.
- Keep the Alarm Unit and Magnet properly positioned and aligned.
- Do not exceed the specified maximum gap between the Alarm Unit and Magnet.
- Test the product regularly.

Safety Warnings

For indoor use only. Do not use in wet locations.

WARNING — LOUD SOUND

Prolonged or repeated exposure to the alarm sound may cause hearing damage. Keep a safe distance from the Alarm Unit during testing, keep testing brief, and use hearing protection when necessary.

Do not place the Alarm Unit close to your ears.

FCC Warning:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference.
(2) This device must accept any interference received, including interference that may cause undesired operation.

FCC NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-- Reorient or relocate the receiving antenna.
-- Increase the separation between the equipment and receiver.
-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-- Consult the dealer or an experienced radio/TV technician for help.

⚠ WARNING

- **INGESTION HAZARD:** This product contains a button cell or coin battery
- **DEATH** or serious injury can occur if ingested
- A swallowed button cell or coin battery can cause **Internal Chemical Burns** in as little as **2 hours**
- **KEEP** new and used batteries out of **REACH OF CHILDREN**
- **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted part of the body



WARNING

- DO NOT MIX OLD AND NEW BATTERIES
- DO NOT MIX ALKALINE, STANDARD (CARBON-ZINC) OR (NICKEL-CADMIUM) BATTERIES
- DO NOT USE IN WET LOCATIONS
- BATTERIES MAY LEAK HARMFUL LIQUIDS OR IGNITABLE MATERIALS OR EXPLODE CAUSING INJURY AND PRODUCT DAMAGE
- REPLACE ALL BATTERIES AT THE SAME TIME
- REMOVE BATTERIES IF THE PRODUCT IS TO BE UNUSED FOR EXTENDED PERIODS OF TIME

Notes on the Battery

- Battery type: LR44, 1.5V.
- Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children.
- Do NOT dispose of batteries in household trash or incinerate.
- Even used batteries may cause severe injury or death.
- Call a local poison control center for treatment information.
- Non-rechargeable batteries are not to be recharged. Do not force discharge, disassemble, heat above 60°C or incinerate.
- Doing so may result in injury due to vending, leakage or explosion resulting in chemical burns.
- Ensure the batteries are installed correctly according to polarity (+ and -).
- Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries.
- Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.
- Always completely secure the battery compartment. If the battery compartment compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.

Warranty: 1 Year
Made in Vietnam